




Hario Ceramic Slim Coffee Mill (MSS-1B)

This user manual is an interpretation of the instructions included in the box

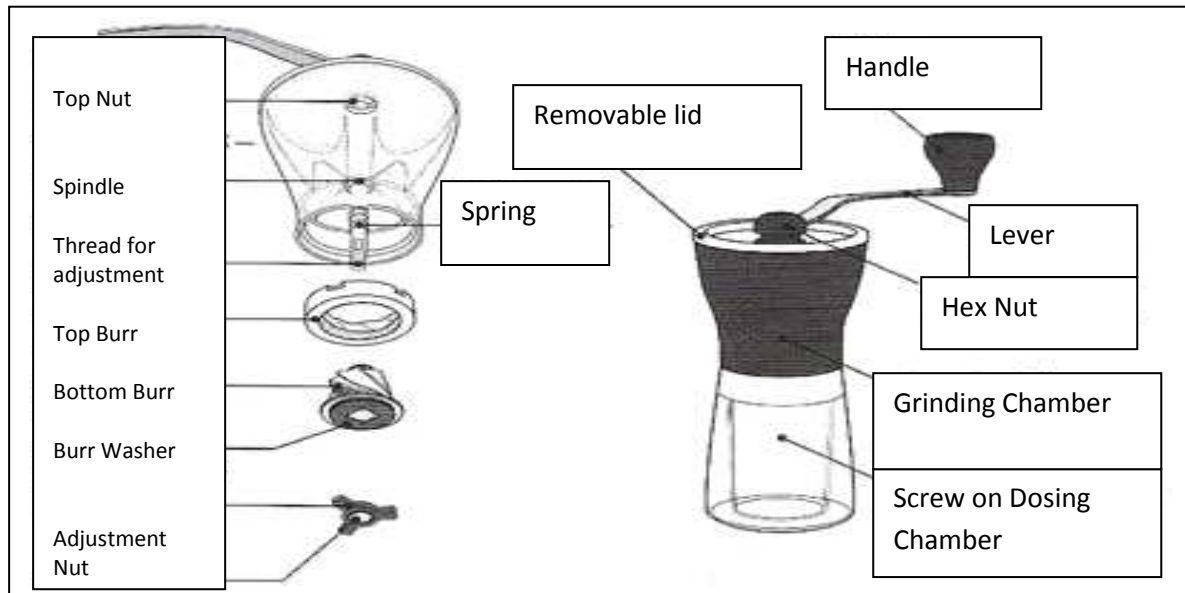

The Hario Ceramic Slim Coffee Mill comes pre-assembled

There are 3 main parts

1. Handle
2. Grinding Chamber
3. Dosing Chamber

Filling the Grinding Chamber

Remove the clear lid by popping this off (has no thread therefore will not unscrew)
Fill with roasted whole beans and reattach the lid

Adjusting the Grind

The adjustment nut is removable, allowing the bottom burr to be removed fully
The adjustment nut controls the distance between the burrs
Turning the adjustment nut Clockwise decreases the space between the burrs (Finer)
Turning the adjustment nut anti-Clockwise increases the space between the burrs (Coarser)

Grinding

Attach the handle and grind Clockwise
The 1 and 2 cup indicators* are indicative only.
For best results weigh your grounds

* 1 cup = 10g-12g 2 cups = 20g-24g

Disclaimer: diagrams are © Hario | this is not a direct translation of the Hario manual